MACHINES







Machines - Candyfloss Machine





CANDYFLOSS INSTRUCTIONS:

INGREDIENTS: +/- 35-40 Servings

- 2.5kg White sugar
- 40ml Food colouring ($\frac{1}{2}$ to full as required for desired colour.
- 1. Put on a glove or use a plastic utensil to mix the colourant or flavouring into the white sugar thoroughly.
- 2. Once the sugar is fully mixed, turn on the candyfloss machine and allow it to heat up for 3–5 minutes.
- 3. Carefully spoon the coloured/flavoured sugar mixture into the barrel of the machine. Make sure the barrel is filled completely.
- 4. Switch the rotation setting to "ON."
- 5. Use a plastic stick to collect the candyfloss by moving it in the opposite direction of the machine's spin.









SLUSHY INSTRUCTIONS:

INGREDIENTS: +/- 30 Servings per Barrel

- 8L Water
- Slushy Mixture
- 1. Use 8 litres of water for every 1 packet of the mixture.
- 2. Combine the water and mixture in a bucket or large container.
- 3. Stir thoroughly with a spoon until the mixture is fully dissolved.
- 4. Pour the prepared mixture into separate barrels for each flavour.
- 5. Switch the machine on (do not adjust any settings or dials).
- 6. Allow the machine to warm up for 45 minutes to 1 hour until ready. (NB this depends on the electrical supply)



Machines - Popcorn Machine





POPCORN INSTRUCTIONS:

INGREDIENTS: +/- 16-20 Servings

- 1kg Popcorn kernels
- Oil (as required)
- Seasonings
- 1. Place popcorn kernels/seeds in a bucket or container and mix with oil until evenly coated (not soaked).
- 2. Preheat the popcorn machine or switch the pot on.
- 3. Add one full scoop of the coated kernels/seeds into the pot.
- 4. Close the lid and allow the popcorn to pop until it overflows.




Machines - Mobile Toilet - His & Hers (Exterior)





Machines - Mobile Toilet (Interior)



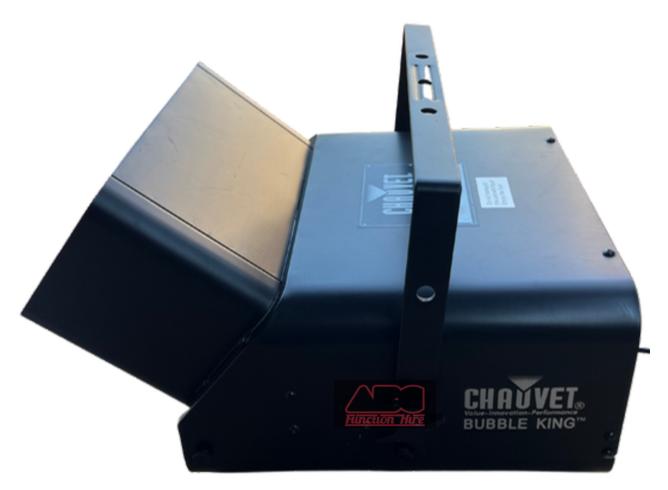



Machines - Bubble Machine

